


Auto Adjust Gradation is a process used to maintain color consistency. You can recalibrate the machine when you notice irregularities in the color of the copies or prints, such as when copies turn out to be different from the original in gradation, density, or color.

AUTO ADJUST GRADATION:

1. Press **Settings/Registration**
2. Select **Adjustment/Maintenance**
3. Select **Adjust Image Quality**
4. Select **Auto Adjust Gradation**
5. Select the **Paper Type** to correct:
 - **Plain:** media with a weight of 64 - 93 g/m²
 - **Heavy 1/Heavy 2:** media with a weight of 106 - 209 g/m²
 - **Heavy 3:** media with a weight of 210 - 256 g/m²
6. Choose:
 - **Full Adjust** (recommended weekly)
 - **Quick Adjust** (recommended between jobs ONLY if a Fiery Device is not attached)
7. Choose the **Paper Source**
8. Press **OK**
9. Select **Start Printing**

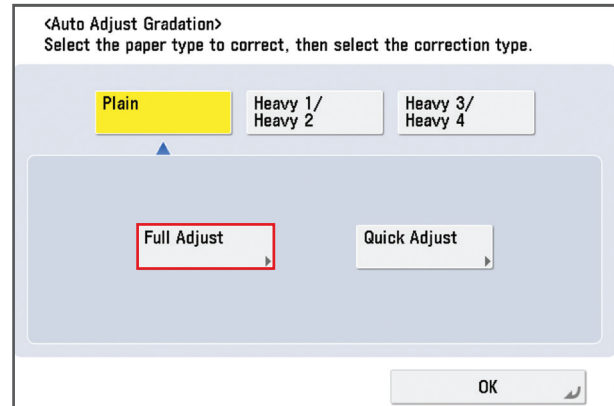

Test Page 1



10. Place the page face down on the platen glass with the black stripe to the left
11. Select **Start Scanning**
12. Select **Start Printing**

Test Page 2



13. Place the page face down on the platen glass with the black stripe to the top
14. Select **Start Scanning**
15. Select **Start Printing**

Test Page 3



16. Place the page face down on the platen glass with the black stripe to the top
17. Select **Start Scanning**
18. Select **Start Printing**

Test Page 4



19. Place the page face down on the platen glass with the black stripe to the top
20. Select **Start Scanning**

