

McEwen Dining Engagement Space

Controlling the system with your Device

1. The Crestron Touch Control Panel

- The Crestron button control system resides to the left of the TV
- To turn on the system press the power button on the top right hand side of the button panel.

2. Select the appropriate input

HDMI, AirMedia, or VGA

3. Connect the Avaya Camera (located ceiling center)

Locate the USB cable connection and connect it to your device.

MacBook: If your computer does not have the appropriate USB port you will need to use an adapter. Connecting the USB web camera into a hub or docking station will not work.

4. Select Avaya HC020 as the camera and microphone source

In your chosen video conferencing interface (Zoom, WebEx, or Teams) select Avaya HC020 as the camera and microphone source.

Note: The Avaya remote can be used to adjust the camera (left, right, zoom in, zoom out).

If the camera does not respond to input from the remote

- Make sure the camera is on by looking for the blue light (this tiny light will be located beside the camera's lens)
- Press the "1" button on the remote
- Try the input again
- If the camera has reached its max zoom, it may not respond because no additional adjustments can be made

5. Confirm that Crestron has been selected as the audio source for sound

Choose Crestron as the sound source to use the speakers in the Engagement space

The volume control for the speakers is located below the power button on the button panel

Camera

Avaya HC020

Microphone

Avaya HC020

Connections

HDMI, AirMedia,
VGA

Note: If the presentation includes a video use HDMI.

Blended Classroom Technology Guide

- Change camera and audio settings
- Step-by-step software instructions
- Troubleshoot classroom technology

www.elon.edu/ClassTechGuide

Report an Issue

www.elon.edu/ITsupport | (336) 278-5200